



4WPB100, 4WPB1K

PRT Bridge Terminal Input Modules

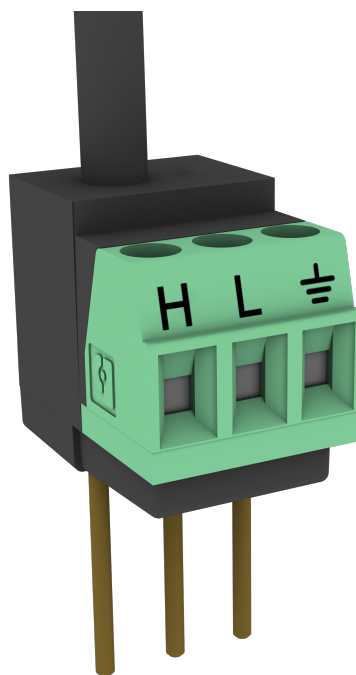


Table of contents

1. Function	1
2. Specifications	2
3. Wiring	2
4. Programming examples	4
4.1 GRANITE 9/10 program example	5
4.2 GRANITE 6/CR6 program example	6
4.3 CR1000X program example	6
4.4 CR1000 program example	7
4.5 CR9000X program example	7
5. PRT in 4-wire half bridge	8
5.1 Excitation voltage	9
5.2 Calibrating a PRT	9

1. Function

A terminal input module (TIM) connects directly to a data logger or GRANITE analog input module. It provides completion resistors for resistive bridge measurements, voltage dividers, and precision current shunts. The 4WPB100 and 4WPB1K are used to provide completion resistors for 4 wire half bridge measurements of 100 Ω and 1 k Ω platinum resistance thermometer (PRT), respectively.

NOTE:

The GRANITE 6 and CR6 include the fixed resistor and current excitation required to complete the half-bridge circuit without a terminal input module. However, the GRANITE 6 and CR6 are still compatible with a terminal input module and may be used with one, should the application require it.

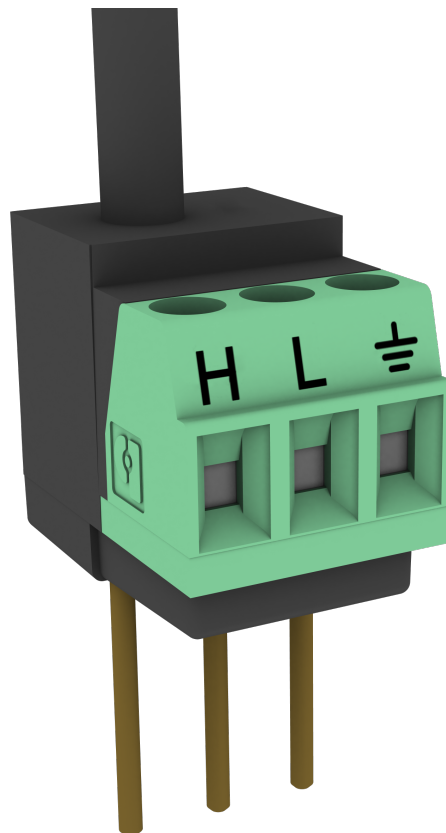


FIGURE 1-1. Terminal input module

2. Specifications

Current limiting 10 k Ω resistor

Tolerance @ 25 °C: $\pm 5\%$

Power rating: 0.25 W

Completion resistor

Tolerance @ 25 °C: $\pm 0.01\%$

Maximum temperature coefficient: ± 0.8 ppm/°C

Power rating @ 70 °C: 0.25 W

EU certificate of conformity: https://s.campbellsci.com/documents/us/compliance/eudoc_terminal-input-modules.pdf

3. Wiring

When making 4-wire half bridge measurements, the 4WPB is connected to adjacent **H** and **L** terminals to perform a differential measurement. The sense wires from the PRT (indicated by dashed lines in [FIGURE 3-1](#) (p. 3) are connected to a second pair of **H** and **L** terminals to perform a differential measurement. The black excitation wire is connected to an excitation terminal. In the following example, the 4WPB is connected to the **1H** and **1L** terminals, and the PRT to the **2H** and **2L** terminals. The excitation wire is connected to the **VX1** terminal.

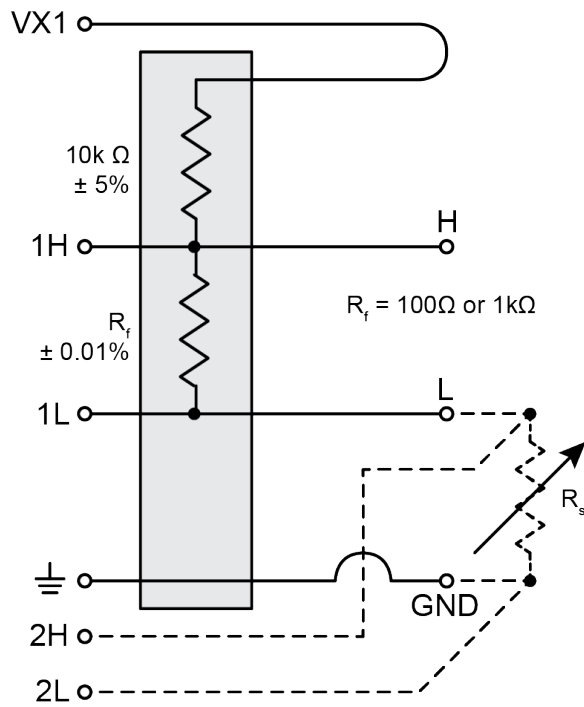


FIGURE 3-1. Wiring for example program

Function	Label/Wire	GRANITE analog input module	GRANITE 6, CR6	CR3000, CR1000X, CR800, CR850, CR1000	CR9000X
Excitation	Black wire	X1	U5	VX1	Excitation 1
V1 high	H	1H	U1	1H	1H
V1 low	L	1L	U2	1L	1L
Ground	G	⊥	⊥	⊥	⊥

¹ The GRANITE 9 and GRANITE 10 do not directly make analog measurements. Instead, they use analog input modules such as the VOLT 108 or VOLT 116. When making a half-bridge measurement, the terminal input module is connected to the analog input module, which is then connected to the GRANITE 9 or GRANITE 10.

4. Programming examples

The following examples show the two instructions necessary to 1) make the measurement and 2) calculate the temperature. The result of the half bridge measurement as shown is R_s/R_0 , the input required for the PRT algorithm to calculate temperature.

If using a calibrated sensor, the exact measurement of R_0 will be known. Use this value to increase the accuracy of the `PRTCalc()` instruction by inserting the following equation between the `BrHalf4W()` and `PRTCalc()` instructions in the example programs.

$$Rs_R0 = Rs_R0*100/R0$$

where R_0 is the sensor resistance at 0 °C

The examples are for a 100 Ω PRT and 4WPB1K. The excitation voltages used were chosen with the assumption that the temperature would not exceed 50 °C. Calculation of optimum excitation voltage is discussed in [Excitation voltage](#) (p. 9). Using the 4WPB1K allows for a higher excitation voltage.

When using the 4WPB100, the excitation voltage parameter in the `BrHalf4W()` instruction on data loggers with a 4000 mV maximum excitation voltage must be set to a lower value. As shown in [Excitation voltage](#) (p. 9), the maximum excitation voltage when using the 4WPB100 is 3579 mV for sensors with a 0.35 mA maximum excitation current. The excitation voltage parameter must be set below this threshold.

4.1 GRANITE 9/10 program example

The GRANITE 9 and GRANITE 10 require the use of an analog input module, such as the VOLT 108, when making a half-bridge measurement.

CRBasic Example 1: GRANITE 9/10 4-wire half bridge example

```
'4-wire half bridge example
'GRANITE 9 and GRANITE 10 data loggers (with a VOLT 108)

'Declare Variables and Units
Public Temp_C_4wire
Public Rs_R0

'Define Data Tables
DataTable(Hourly, True, -1)
  DataInterval(0, 60, Min, 10)
  Average(1, Temp_C_4wire, IEEE4, False)
EndTable

'Main Program
BeginProg
  'Configure the VOLT 108 Module and assign it CPI address 'CPI_BUSA+1'
  CPIAddModule(VOLT108, 10, " ", CPI_BUSA+1)
  'Main Scan
  Scan(5, Sec, 1, 0)
  'Half Bridge, 4-wire measurements on the VOLT 108
  CDM_BrHalf4W(VOLT108, CPI_BUSA+1, Rs_R0, 1, mV1000, mV1000, 1, 1, 1, 4000, _
  True, True, 500, 60, 1, 0)
  'PRT temperature calculation
  PRTCalc (Temp_C_4wire, 1, Rs_R0, 0, 1.0, 0)
  'Call Data Tables and Store Data
  CallTable Hourly
NextScan
EndProg
```

4.2 GRANITE 6/CR6 program example

The GRANITE 6 and CR6 include the fixed resistor and current excitation required to complete the half-bridge circuit without a terminal input module. However, the GRANITE 6 and CR6 are still compatible with a terminal input module and may be used with one, should the application require it.

CRBasic Example 2: GRANITE 6/CR6 4-wire half bridge example

```
'GRANITE 6/CR6 data logger 4-wire half bridge

Public Rs_R0, Temp_C

DataTable (Hourly,True,-1)
  DataInterval (0,60,Min,0)
  Average (1,Temp_C,IEEE4,0)
EndTable

BeginProg
  Scan (1,Sec,0,0)
  BrHalf4W (Rs_R0,1,mV1000,mV1000,U1,U5,1,2500,True ,True ,0,250,1.0,0)
  PRTCalc (Temp_C,1,Rs_R0,0,1,0)
  CallTable Hourly
  NextScan
EndProg
```

4.3 CR1000X program example

CRBasic Example 3: CR1000X 4-wire half bridge example

```
'CR1000X-series data logger 4-wire half bridge

Public Rs_R0, Temp_C

DataTable (Hourly,True,-1)
  DataInterval (0,60,Min,0)
  Average (1,Temp_C,IEEE4,0)
EndTable

BeginProg
  Scan (1,Sec,0,0)
  BrHalf4W (Rs_R0,1,mV1000,mV1000,1,Vx1,1,4000,True ,True ,0,250,1.0,0)
  PRTCalc (Temp_C,1,Rs_R0,0,1,0)
  CallTable Hourly
  NextScan
EndProg
```


4.4 CR1000 program example

CRBasic Example 4: CR1000 4-wire half bridge example

```
'CR1000-series data logger 4-wire half bridge

Public Rs_R0, Temp_C

DataTable (Hourly, True, -1)
  DataInterval (0, 60, Min, 0)
  Average (1, Temp_C, IEEE4, 0)
EndTable

BeginProg
  Scan (1, Sec, 0, 0)
  BrHalf4W(Rs_R0, 1, mV250, mV250, 1, Vx1, 1, 2500, True, True, 0, 250, 1.0, 0)
  PRTCalc (Temp_C, 1, Rs_R0, 0, 1, 0)
  CallTable Hourly
  NextScan
EndProg
```

4.5 CR9000X program example

CRBasic Example 5: CR9000X 4-wire half bridge example

```
'CR9000X data logger 4-wire half bridge

Public Rs_Ro, Temp_F

DataTable (Temp_F, 1, -1)
  DataInterval (0, 0, 0, 10)
  Sample (1, Temp_F, FP2)
EndTable

BeginProg
  Scan (1, mSec, 0, 0)
  BrHalf4W (Rs_Ro, 1, mV1000, mV1000, 4, 1, 5, 7, 1, 4000, True, True, 30, 40, 1.0, 0)
  PRTCalc (Temp_F, 1, Rs_Ro, 0, 1.8, 32)
  CallTable Temp_F
  NextScan
EndProg
```

5. PRT in 4-wire half bridge

A 4-wire half bridge is the best choice for accuracy where the platinum resistance thermometer (PRT) is separated from other bridge completion resistors by a wire length having more than a few thousandths of an Ohm resistance. Four wires to the sensor allows one set of wires to carry the excitation current with a separate set of sense wires allowing the voltage across the PRT to be measured without the effect of any voltage drop in the excitation wires. This arrangement cancels out both the effect of the wire length and differences in resistance of the excitation wires going out to and returning from the sensor.

FIGURE 3-1 (p. 3) shows the circuit used to measure the PRT. The 10 kΩ resistor allows the use of a high excitation voltage and low voltage ranges on the measurements. This ensures noise in the excitation does not have an effect on signal noise, and that self heating of the PRT due to excitation is kept to a minimum. Because the fixed resistor (R_f) and the PRT (R_s) have approximately the same resistance, the differential measurement of the voltage drop across the PRT can be made on the same range as the differential measurement of the voltage drop across R_f .

The result of the four wire half bridge Instruction is:

$$\frac{V_2}{V_1}$$

the voltage drop is equal to the current (I), times the resistance thus:

$$\frac{V_2}{V_1} = \frac{I \cdot R_s}{I \cdot R_f} = \frac{R_s}{R_f}$$

The `PRTCa1c()` instruction computes the temperature (°C) for a DIN 43760 standard PRT from the ratio of the PRT resistance at the temperature being measured (R_s) to its resistance at 0 °C (R_0). Thus, a multiplier of R_f/R_0 is used with the 4-wire half bridge instruction to obtain the desired intermediate, $R_s/R_0 = (R_s/R_f \times R_f/R_0)$. If R_f and R_0 are equal, the multiplier is 1.

The fixed resistor must be thermally stable. The 0.8 ppm/°C temperature coefficient would result in a maximum error of 0.035 °C at 125 °C. This measurement is ratiometric (R_s/R_f) and does not rely on the absolute values of either R_s or R_f .

The properties of the 10 kΩ resistor do not affect the result. The purpose of this resistor in the circuit is to limit current.

5.1 Excitation voltage

When determining the excitation voltage, it is important to consider the maximum excitation current the sensor can experience without self-heating. This is typically less than 0.35 mA. Refer to the manufacturer's sensor data sheet for the specific value.

Once the maximum excitation current is known, the excitation voltage is then calculated.

$$V_x = I_x (R_1 + R_{S_{\max}} + R_f)$$

Where:

$R_1 = 10 \text{ k}\Omega$, the current limiting resistor in the terminal input module

$R_{S_{\max}}$ = Maximum sensor resistance based on the maximum expected temperature to be measured

R_f = PRT completion resistor value

Using the typical 0.35 mA maximum excitation current, the maximum excitation voltage for the sensor is:

4WPB100

$$V_x = 0.35 \text{ mA} (10,000 \Omega + 125 \Omega + 100 \Omega) = 3579 \text{ mV}$$

4WPB1K

$$V_x = 0.35 \text{ mA} (10,000 \Omega + 1250 \Omega + 1000 \Omega) = 4290 \text{ mV}$$

Small variations in sensor resistance do not cause significant differences in the calculated maximum excitation voltage. For example, changing the sensor resistance to 84 Ω when used with the 4WPB100 reduces the maximum excitation from 3579 mV to 3564 mV.

5.2 Calibrating a PRT

The greatest source of error in a PRT is likely to be that the resistance at 0 °C deviates from the nominal value. Calibrating the PRT in an ice bath can correct this offset and any offset in the fixed resistor in the terminal input module.

The result of the 4 wire half bridge is:

$$\frac{V_2}{V_1} = \frac{I \bullet R_s}{I \bullet R_f} = \frac{R_s}{R_f}$$

With the PRT at 0 °C, $R_s = R_0$. Thus, the above result becomes R_0/R_f , the reciprocal of the multiplier required to calculate temperature, R_f/R_0 . By making a measurement with the PRT in an ice bath, errors in both R_s and R_0 can be accounted for.

To perform the calibration, connect the PRT to the data logger and program the data logger to measure the PRT with the 4-wire half bridge as shown in the example section (multiplier = 1). Place the PRT in an ice bath (@ 0 °C; $R_s=R_0$). Read the result of the bridge measurement. The reading is R_s/R_f , which is equal to R_0/R_f since $R_s=R_0$. The correct value of the multiplier, R_f/R_0 , is the reciprocal of this reading. For example, if the initial reading is 0.9890, the correct multiplier is: $R_f/R_0 = 1/0.9890 = 1.0111$.

Limited warranty

Products manufactured by Campbell Scientific are warranted by Campbell Scientific to be free from defects in materials and workmanship under normal use and service for twelve months from the date of shipment unless otherwise specified on the corresponding product webpage. See Product Details on the Ordering Information pages at www.campbellsci.com. Other manufacturer's products, that are resold by Campbell Scientific, are warranted only to the limits extended by the original manufacturer.

Refer to www.campbellsci.com/terms#warranty for more information.

CAMPBELL SCIENTIFIC EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Campbell Scientific hereby disclaims, to the fullest extent allowed by applicable law, any and all warranties and conditions with respect to the Products, whether express, implied or statutory, other than those expressly provided herein.

Assistance

Products may not be returned without prior authorization.

Products shipped to Campbell Scientific require a Returned Materials Authorization (RMA) or Repair Reference number and must be clean and uncontaminated by harmful substances, such as hazardous materials, chemicals, insects, and pests. Please complete the required forms prior to shipping equipment.

Campbell Scientific regional offices handle repairs for customers within their territories. Please see the back page for the Global Sales and Support Network or visit www.campbellsci.com/contact to determine which Campbell Scientific office serves your country.

To obtain a Returned Materials Authorization or Repair Reference number, contact your CAMPBELL SCIENTIFIC regional office. Please write the issued number clearly on the outside of the shipping container and ship as directed.

For all returns, the customer must provide a "Statement of Product Cleanliness and Decontamination" or "Declaration of Hazardous Material and Decontamination" form and comply with the requirements specified in it. The form is available from your CAMPBELL SCIENTIFIC regional office. Campbell Scientific is unable to process any returns until we receive this statement. If the statement is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

Safety

DANGER — MANY HAZARDS ARE ASSOCIATED WITH INSTALLING, USING, MAINTAINING, AND WORKING ON OR AROUND TRIPODS, TOWERS, AND ANY ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC. FAILURE TO PROPERLY AND COMPLETELY ASSEMBLE, INSTALL, OPERATE, USE, AND MAINTAIN TRIPODS, TOWERS, AND ATTACHMENTS, AND FAILURE TO HEED WARNINGS, INCREASES THE RISK OF DEATH, ACCIDENT, SERIOUS INJURY, PROPERTY DAMAGE, AND PRODUCT FAILURE. TAKE ALL REASONABLE PRECAUTIONS TO AVOID THESE HAZARDS. CHECK WITH YOUR ORGANIZATION'S SAFETY COORDINATOR (OR POLICY) FOR PROCEDURES AND REQUIRED PROTECTIVE EQUIPMENT PRIOR TO PERFORMING ANY WORK.

Use tripods, towers, and attachments to tripods and towers only for purposes for which they are designed. Do not exceed design limits. Be familiar and comply with all instructions provided in product manuals. Manuals are available at www.campbellsci.com. You are responsible for conformance with governing codes and regulations, including safety regulations, and the integrity and location of structures or land to which towers, tripods, and any attachments are attached. Installation sites should be evaluated and approved by a qualified engineer. If questions or concerns arise regarding installation, use, or maintenance of tripods, towers, attachments, or electrical connections, consult with a licensed and qualified engineer or electrician.

General

- Protect from over-voltage.
- Protect electrical equipment from water.
- Protect from electrostatic discharge (ESD).
- Protect from lightning.
- Prior to performing site or installation work, obtain required approvals and permits. Comply with all governing structure-height regulations.
- Use only qualified personnel for installation, use, and maintenance of tripods and towers, and any attachments to tripods and towers. The use of licensed and qualified contractors is highly recommended.
- Read all applicable instructions carefully and understand procedures thoroughly before beginning work.
- Wear a **hardhat** and **eye protection**, and take **other appropriate safety precautions** while working on or around tripods and towers.
- **Do not climb** tripods or towers at any time, and prohibit climbing by other persons. Take reasonable precautions to secure tripod and tower sites from trespassers.
- Use only manufacturer recommended parts, materials, and tools.

Utility and Electrical

- **You can be killed** or sustain serious bodily injury if the tripod, tower, or attachments you are installing, constructing, using, or maintaining, or a tool, stake, or anchor, come in **contact with overhead or underground utility lines**.
- Maintain a distance of at least one-and-one-half times structure height, 6 meters (20 feet), or the distance required by applicable law, **whichever is greater**, between overhead utility lines and the structure (tripod, tower, attachments, or tools).
- Prior to performing site or installation work, inform all utility companies and have all underground utilities marked.
- Comply with all electrical codes. Electrical equipment and related grounding devices should be installed by a licensed and qualified electrician.
- Only use power sources approved for use in the country of installation to power Campbell Scientific devices.

Elevated Work and Weather

- Exercise extreme caution when performing elevated work.
- Use appropriate equipment and safety practices.
- During installation and maintenance, keep tower and tripod sites clear of un-trained or non-essential personnel. Take precautions to prevent elevated tools and objects from dropping.
- Do not perform any work in inclement weather, including wind, rain, snow, lightning, etc.

Maintenance

- Periodically (at least yearly) check for wear and damage, including corrosion, stress cracks, frayed cables, loose cable clamps, cable tightness, etc. and take necessary corrective actions.
- Periodically (at least yearly) check electrical ground connections.

Internal Battery

- Be aware of fire, explosion, and severe-burn hazards.
- Misuse or improper installation of the internal lithium battery can cause severe injury.
- Do not recharge, disassemble, heat above 100 °C (212 °F), solder directly to the cell, incinerate, or expose contents to water. Dispose of spent batteries properly.

WHILE EVERY ATTEMPT IS MADE TO EMBODY THE HIGHEST DEGREE OF SAFETY IN ALL CAMPBELL SCIENTIFIC PRODUCTS, THE CUSTOMER ASSUMES ALL RISK FROM ANY INJURY RESULTING FROM IMPROPER INSTALLATION, USE, OR MAINTENANCE OF TRIPODS, TOWERS, OR ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.



Global Sales & Support Network

A worldwide network to help meet your needs



Campbell Scientific regional offices

Australia

Location: Garbutt, QLD Australia
Phone: 61.7.4401.7700
Email: info@campbellsci.com.au
Website: www.campbellsci.com.au

Brazil

Location: São Paulo, SP Brazil
Phone: 11.3732.3399
Email: vendas@campbellsci.com.br
Website: www.campbellsci.com.br

Canada

Location: Edmonton, AB Canada
Phone: 780.454.2505
Email: dataloggers@campbellsci.ca
Website: www.campbellsci.ca

China

Location: Beijing, P. R. China
Phone: 86.10.6561.0080
Email: info@campbellsci.com.cn
Website: www.campbellsci.com.cn

Costa Rica

Location: San Pedro, Costa Rica
Phone: 506.2280.1564
Email: info@campbellsci.cc
Website: www.campbellsci.cc

France

Location: Vincennes, France
Phone: 0033.0.1.56.45.15.20
Email: info@campbellsci.fr
Website: www.campbellsci.fr

Germany

Location: Bremen, Germany
Phone: 49.0.421.460974.0
Email: info@campbellsci.de
Website: www.campbellsci.de

India

Location: New Delhi, DL India
Phone: 91.11.46500481.482
Email: info@campbellsci.in
Website: www.campbellsci.in

South Africa

Location: Stellenbosch, South Africa
Phone: 27.21.8809960
Email: sales@campbellsci.co.za
Website: www.campbellsci.co.za

Spain

Location: Barcelona, Spain
Phone: 34.93.2323938
Email: info@campbellsci.es
Website: www.campbellsci.es

Thailand

Location: Bangkok, Thailand
Phone: 66.2.719.3399
Email: info@campbellsci.asia
Website: www.campbellsci.asia

UK

Location: Shepshed, Loughborough, UK
Phone: 44.0.1509.601141
Email: sales@campbellsci.co.uk
Website: www.campbellsci.co.uk

USA

Location: Logan, UT USA
Phone: 435.227.9120
Email: info@campbellsci.com
Website: www.campbellsci.com