



pn 31174
3/2017

Info Link

Introduction

The quick deploy guide is a reference tool outlining the setup process. Keep this document with the CRWV3 for future reference. The CRWV3 Owner's Manual is the definitive source for detailed setup, configuration, and installation instructions.

www.campbellsci.com/crwv3

Quick Deploy Contents

- Hardware Overview
- VSPECT Overview
- Deployment Instructions:
 - Precautions
 - 1. Software
 - 2. Setup & Configuration
 - 3. Sensor Connection
 - 4. Power Options
 - 5. Field Installation
 - 6. Data Collection & Communications
 - 7. Radio Network Basics
 - 8. Maintenance

Precautions

The CRWV3 is a rugged instrument and can provide years of service with proper care and maintenance.


- Protect the CRWV3 from over-voltage (16–28 Vdc charge input)
- Protect the CRWV3 from internal moisture (maintain desiccant)
- Protect the CRWV3 from electrostatic discharge (ground properly)

Hardware Overview

CRWV3

- 1 Lid screws
- 2 Battery¹
- 3 Battery hinge pin¹
- 4 Battery connection
- 5 Charge/solar input
- 6 USB connection
- 7 Enclosure lock
- 8 CRWV3 wiring panel
- 9 Serial number
- 10 Radio diagnostics²
- 11 LED indicators
- 12 Sensor cable entry (x3)
- 13 Charge cable entry
- 14 Antenna connection³
- 15 Ground lug

¹ Rechargeable battery option shown, the hinge pin can be removed and the hinge rotated to allow either battery option to fit.
² The radio diagnostic port is only for the -RF451 option
³ RPSMA antenna connection

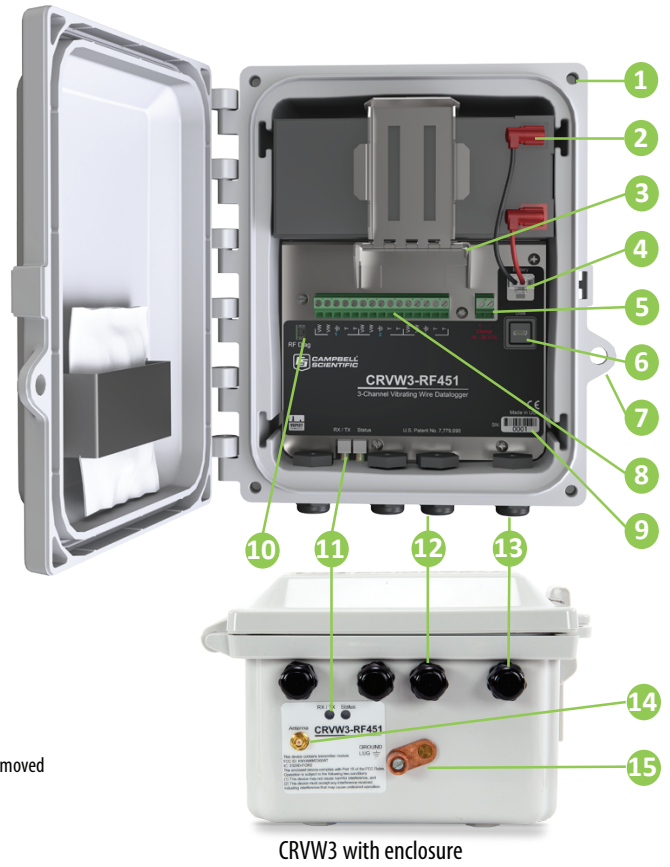

The CRWV3 is available field ready with an enclosure and battery or as an individual component. The configuration and operation of the CRWV3 is the same for either option. The enclosure model is field ready while the non-enclosure model allows the user to select an enclosure/battery for specific site requirements.

VSPECT™ Overview

VSPECT™ provides the best vibrating wire measurement available⁴. Sensor frequency is easily identified while filtering out environmental and electrical noise that affects the quality of other vibrating wire readers. VSPECT™ provides measurement diagnostics to understand sensor response, installation quality, and identify incorrect wiring or damaged sensors.

Output and Diagnostics

- Sensor Frequency⁵ (Hz)**
Frequency is the basic measurement from a vibrating wire sensor. The frequency can be converted into engineering units (pressure, displacement, etc.) and is identified as the largest measured amplitude signal within the frequency sweep.
- Sensor Amplitude⁶ (mV RMS)**
Signal strength from the vibrating wire sensor. Amplitude varies and is affected by the sensor type, excitation strength (adjustable), and sensor cable length.
- Signal-to-Noise Ratio⁶ (unitless)**
The signal-to-noise ratio is calculated as sensor signal amplitude divided by the largest noise amplitude within the sweep frequency. A low signal-to-noise ratio indicates a weak sensor signal or a noisy environment.

- Noise Frequency⁶ (Hz)**
The largest amplitude noise signal within the frequency sweep.
 - Decay Ratio⁶ (Hz)**
Signal attenuation; how quickly the signal strength decreases.
 - Thermistor/RTD Resistance⁵ (ohms)**
Used to calculate sensor temperature and correct for thermal effects⁷.
- ⁴ Protected under U.S. Patent No. 7,779,690
⁵ Frequency and resistance are measured values
⁶ Diagnostic values used to describe the quality of the frequency measurement
⁷ The temperature measurement (when present) can be used in the CRWV3, another datalogger or post processed to apply a thermal correction.

Measurement Graphs

The following two sets of graphs illustrate the use of VSPECT™ to identify a sensor signal in a quiet and noisy environment. Both graphs were created from the same sensor using the Vibrating Wire Report created using a VVAnalyzer. Fig. 1 was measured in an electrically quiet environment, while Fig. 2 was measured in an electrically noisy environment (AC power) similar to what can be seen in a field environment (power lines, motors, radio signals, etc.). The time series on Fig. 1 shows a relatively clean signal¹⁹ that is more clearly identified¹⁷ on the frequency spectrum¹⁶. The time series²³ on Fig. 2 shows the influence of the noise²⁴. Vibrating wire readers that only use the time series²³ to determine the frequency may report an incorrect frequency as a result of noise. The frequency spectrum (VSPECT™) filters the noise²¹ and easily identifies the sensor signal²². VSPECT™ provides noise immunity by correctly identifying the sensor signal and ignoring the influence of electrical noise that plagues time-domain-based vibrating wire readers.

- 16 The Frequency Spectrum graph shows signals with respect to frequency (VSPECT™)
- 17 The sensor signal is determined as the largest signal within the frequency sweep
- 18 The Time Series graph shows raw signals observed with respect to time
- 19 A time series with minimal noise influence
- 20 The frequency sweep is shown as the white area on the graph, only signals within the frequency sweep will be considered as a possible sensor signal

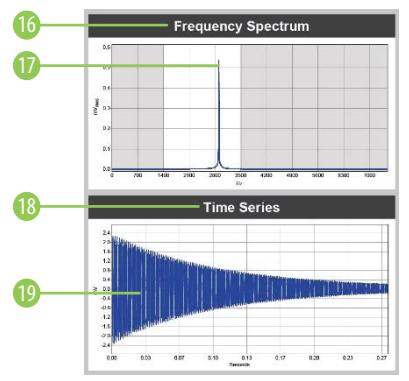


Figure 1: VV Signal


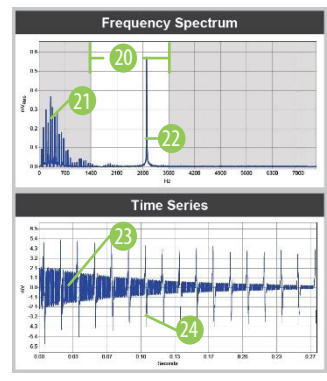


Figure 2: VV Signal With Noise

- 21 Noise is identified and ignored
- 22 A sensor signal is easily identified even when noise is present in the measurement
- 23 A time series with observable noise
- 24 Noise in the time series (this is what confuses non-VSPECT™ devices)


1 Software

- *Device Configuration Utility (DevConfig)* is used to setup and configure the CRWV3.
- *PC200W*, *PC400*, and *LoggerNet* are used to collect data (see step 6), all include *DevConfig*.
- USB drivers, and the steps to connect the CRWV3, are shown on the CRWV3 Series page of *DevConfig*, version 2.10 or higher is required.
- *DevConfig* and *PC200W* may be downloaded (no cost) at: www.campbellsci.com/downloads

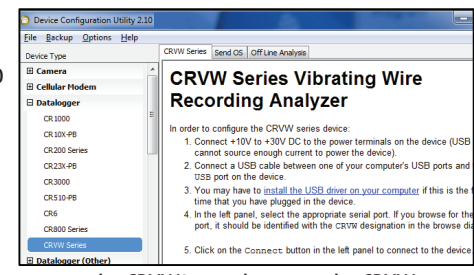

2 Setup & Configuration

Settings in *DevConfig* for the CRWV3 datalogger, radio, and the channels are shown below. Additional explanations are included in *DevConfig*. The USB connection can power the CRWV3 during setup.

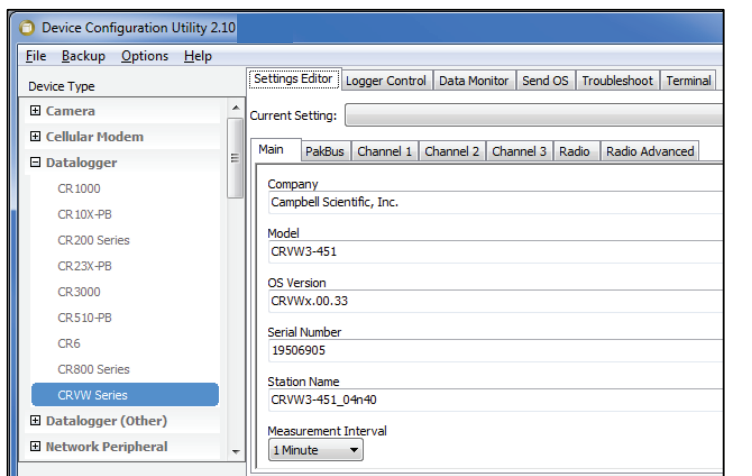


Settings Editor

Main	Measurement interval and current station OS version
PakBus	PakBus address, security settings, and PakBus communications settings
Channel	Channel configuration: frequency sweep, thermistor & calcs
Radio/Advanced	Radio operation mode, ID, power mode, transmit strength, and RF packet settings
Logger Control	Set datalogger clock
Data Monitor	Look at most recent data
Send OS	Send/update the CRWV3 OS
Troubleshoot	Test sensor response/channel. Used to verify sensor operation, wiring, or to troubleshoot (requires 12Vdc power connection).
Terminal	Not typically used. A low level communication tool.

3 Sensor Connection

- Loosen and remove plug from cable entry location (bottom of enclosure)
- Insert cable from the outside
- Connect the sensor to the CRVW3 wiring panel as described in the table and illustration below
- Hand-tighten the cable entries (Do Not Over Tighten)


Label	Description	Common Color Schemes	
VW	First Vibrating Wire Lead	Red	Orange
VW	Second Vibrating Wire Lead	Black	Orange/White
⏏	Ground Lead	Shield	Shield
T	First Thermistor Lead	Green	Blue
T	Second Thermistor Lead	White	Blue/White

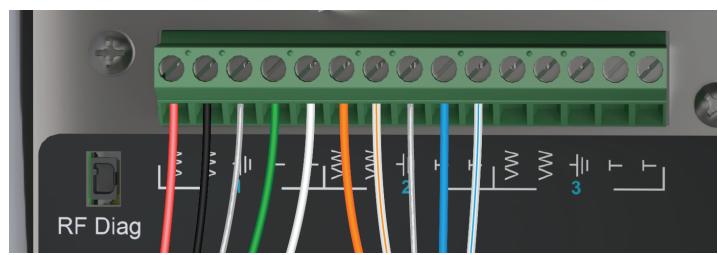

Wiring Note:
Vibrating wire leads may be wired in reverse order (black and red instead of red and black). Thermistor leads are similarly interchangeable.

4 Power Options

- Connect the battery cable (rechargeable or alkaline D-cells) to the CRVW3 wiring panel
- Connect solar panel (optional) to charge "+" & "-" (**Solar Panel Polarity Matters**)
- A 10 Watt solar panel is commonly used, however a 5 or 20 Watt may also be used depending on site-specific communications and location

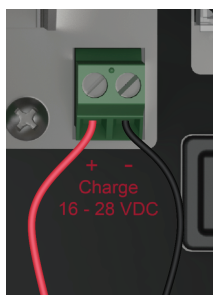


LED Indicators		
Wireless RX/TX	Flash red	Radio transmit
	Flash green	Radio receive
	Solid red	Radio error
	Solid orange	Busy (configuring)
	Off	No communications
Status	Solid green	Measurement
	Flash green	"Awake" mode, USB, recently configured
	Solid orange	Busy (configuring, or can't communicate)
	Solid red	Measurement/program error
	Flash red	USB power insufficient for measurements
Off	Device is asleep, waiting for next measurement	

Regulator/Solar Panel Note:
The rechargeable battery will be charged by the CRVW3 when used with a solar panel (proper installation, solar conditions).


5 Field Installation

Enclosure Mounting	Use the supplied standard mounting kit or the Universal Mounting Bracket (pn 30840, shown below) to secure the CRVW3 enclosure.
Grounding	Connect the ground lug to earth ground. A small enclosure grounding kit (pn 31163) is available for grounding into soil.
Moisture Protection	Ensure the lid is securely closed, cable entry points are tightened, and desiccant packs are installed. Orient the enclosure to minimize water entry (typically with cable entries facing downward).

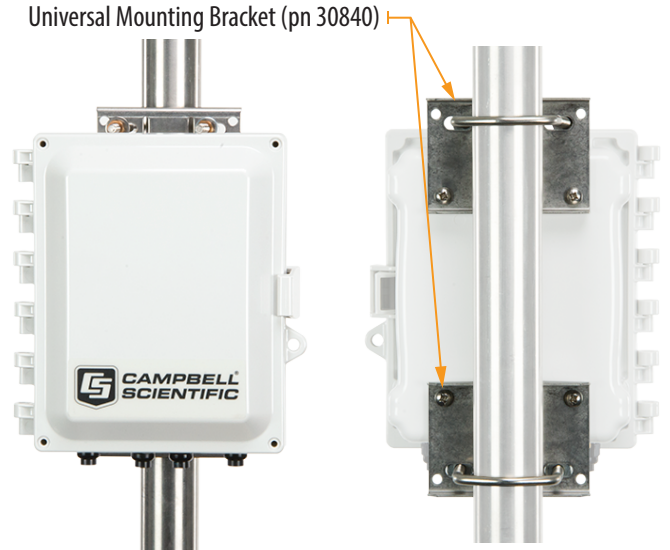


Antenna Options	A small antenna may be connected directly to the enclosure. For longer distance communications, a higher gain or directional antenna with an exterior cable may be necessary. A surge suppressor kit (pn 31312) is recommended when using cabled antennas.
Radios	Radios can only communicate with similar radios. For example, a CRVW3-RF407 can only communicate with other devices that have a built-in -RF407 radio option, or are connected to a stand-alone RF407 radio. The only exception to this rule is the CRVW3-RF451, which can communicate with other devices that have a built-in -RF451 radio option, or are connected to a stand-alone RF451 or RF450.
Verify Sensor Operation	Sensor operation should be validated prior to leaving the site by using the Data Monitor or Troubleshoot tab in <i>DevConfig</i> .

Installation Note:
Protect environmentally exposed antenna connections with self-vulcanizing tape (pn 21212) as shown to the right.

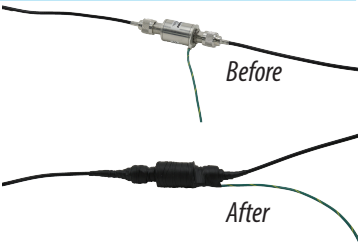

6 Data Collection & Communications

- PC200W, PC400, or LoggerNet Software:**
- Create a station in the software for the CRVW3 based on specific communication requirements (direct connect, radio, multiple stations, etc.)
 - Collect data from the station
 - Radio & Automated collections require LoggerNet

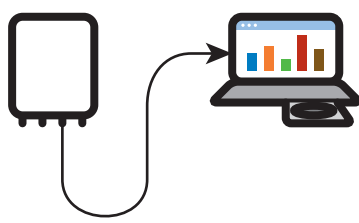


USB Direct Connection

- Requires USB cable (included)
- Supported by all three software packages
- Data can be collected with the CRVW3 powered by USB/PC power



Simple Radio Connection

- Good for stations within radio frequency (RF) range of the PC/radio
- Field testing with a laptop and radio

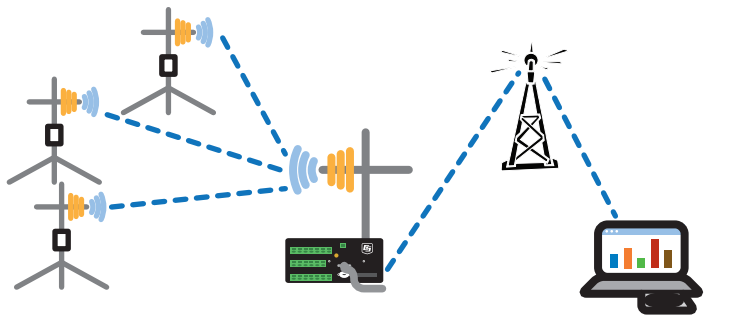

Advanced Communications

- Can utilize one network offsite connection; cell phone, satellite, or other IP connection.
- A centralized datalogger collects site data into a single device
- Multiple CRVW3 dataloggers connect to a centralized datalogger

Communications Note:
A more thorough discussion on connection methods and advanced communications is found in the CRVW3 Manual.

7 Radio Network Basics

- DevConfig* is used to setup/configure individual settings. *Network Planner (LoggerNet)* may be used to setup complete networks, or to see the settings that *LoggerNet* would assign (Pakbus addresses, router settings, etc.).
- Select appropriate antennas based on site conditions.
- Successful communications will be aided by:
 - line-of-site between stations
 - raised antenna locations
- Make sure radio settings match (see table below)

RF451 Settings	RF407, RF412, RF422, and RF427 Settings
<ul style="list-style-type: none"> Only one master radio Subnet and Network IDs 	<ul style="list-style-type: none"> Protocol, power mode, and retry levels RF Network and Hop Sequence

8 Maintenance

Routine maintenance is the best standard of practice to promote a functioning system. Here are some maintenance recommendations; some sites may have more specific maintenance requirements.

Moisture Protection	<ul style="list-style-type: none"> Minimize moisture intrusion inside the enclosure Replace desiccant (pn 6714) and humidity indicator card (pn 28878) as needed Check cable entry points for a good seal Wipe moisture off lid gasket prior to opening (reduce water ingress)
Grounding	<ul style="list-style-type: none"> Check grounding rod, grounding cable, and connections Inspect for loose connections
Solar Panel	<ul style="list-style-type: none"> Clean solar panel with mild detergent and a clean cloth Remove any solar barriers (fallen debris, overhead branches, leaves, etc.)
Data Collection	<ul style="list-style-type: none"> Data should be collected at regular intervals